

# Ecophon®

ACOUSTIC CEILING

Box 500, S-260 61 Hyllinge, Phone: +46 42-17 99 00,  
Fax: +46 42-22 55 55, www.ecophon.com

## Contents

10 litres

## Consumption

Focus: 0,9 l/m<sup>2</sup>

Master: 1,4 l/m<sup>2</sup>

*In case of extremely uneven soffit surface the amount of cement must be increased.*

## Storage

Store in a frost-free environment. Storage time 1 year from date of manufacture.

## INSTRUCTIONS FOR USE

### Preparations

Before installation, ensure a smooth, clean, dry strong and unpainted surface of gypsum plaster board, concrete, light concrete, plaster or fibreboard. The surface must be carefully washed. For painted surfaces or where there is a general uncertainty, an adhesion test should be carried out. This should be carried out the following way: A mounted tile is taken down after about 10 minutes. The braking shall occur in the cement, which should not come loose from the soffit or the back of the tile. Check also that the cement has been flattened out to the right thickness, about 3 mm.

The surface, tiles and glue must be at a temperature of 15-25°C for installation. The A-cement can tolerate occasional freezing. If condensation forms on the surface, carefully stir the water into the rest of the glue.

Tiles with edge C are preferable where the surface is not completely even, as they can be kept in level using Connect Spline 0209. Do not glue wet-pressed tiles or other products with weak surface strength.

### Safety regulations

Use protective goggles and gloves where necessary.

Skin contact: Wash with water.

Eye contact: Rinse well with water.

2005.03 Art.no 9010461


# Connect A-cement

2630 0044


For installing Focus/Master edge B or C 600x600 mm

## Installation


- Wear clean cotton gloves when handling ceiling tiles.
- Measure the ceiling area and decide on which order to install the tiles. Then fit a temporary straight strip of wood or similar as a guide for the first row of tiles.
- The area under each spot (at least 1 dm<sup>2</sup>) should be pre-treated with a thin layer of glue. Use a spatula.
- Place the A-cement in 8 or 12 daubs with a diameter of at least 40 mm as shown in the diagram.

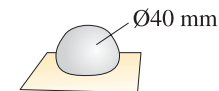

Ecophon Focus:

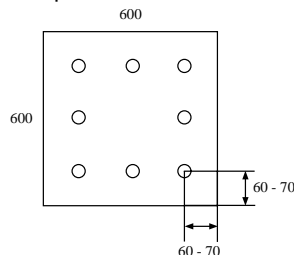

Ecophon Master:

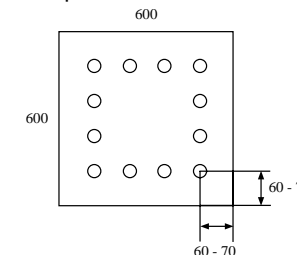

- Install the glued tile within 3 minutes by pressing it against the surface in question with a small rotating motion. Press the tile under each spot of glue so that the glue has a thickness of 3 mm. Place the tiles close together but do not disturb previously installed tiles.
- If an installed tile needs to be taken down, apply new glue before reinstalling. This also applies if a tile is pressed too far up and needs to be adjusted downwards.
- Glue which has not dried can be removed with water.
- During any breaks in the installation process, replace the lid

SAINT-GOBAIN  
ECOPHON